




Kodak EasyShare C713 Capacitor Replacement

Written By: Scott DiGirolamo

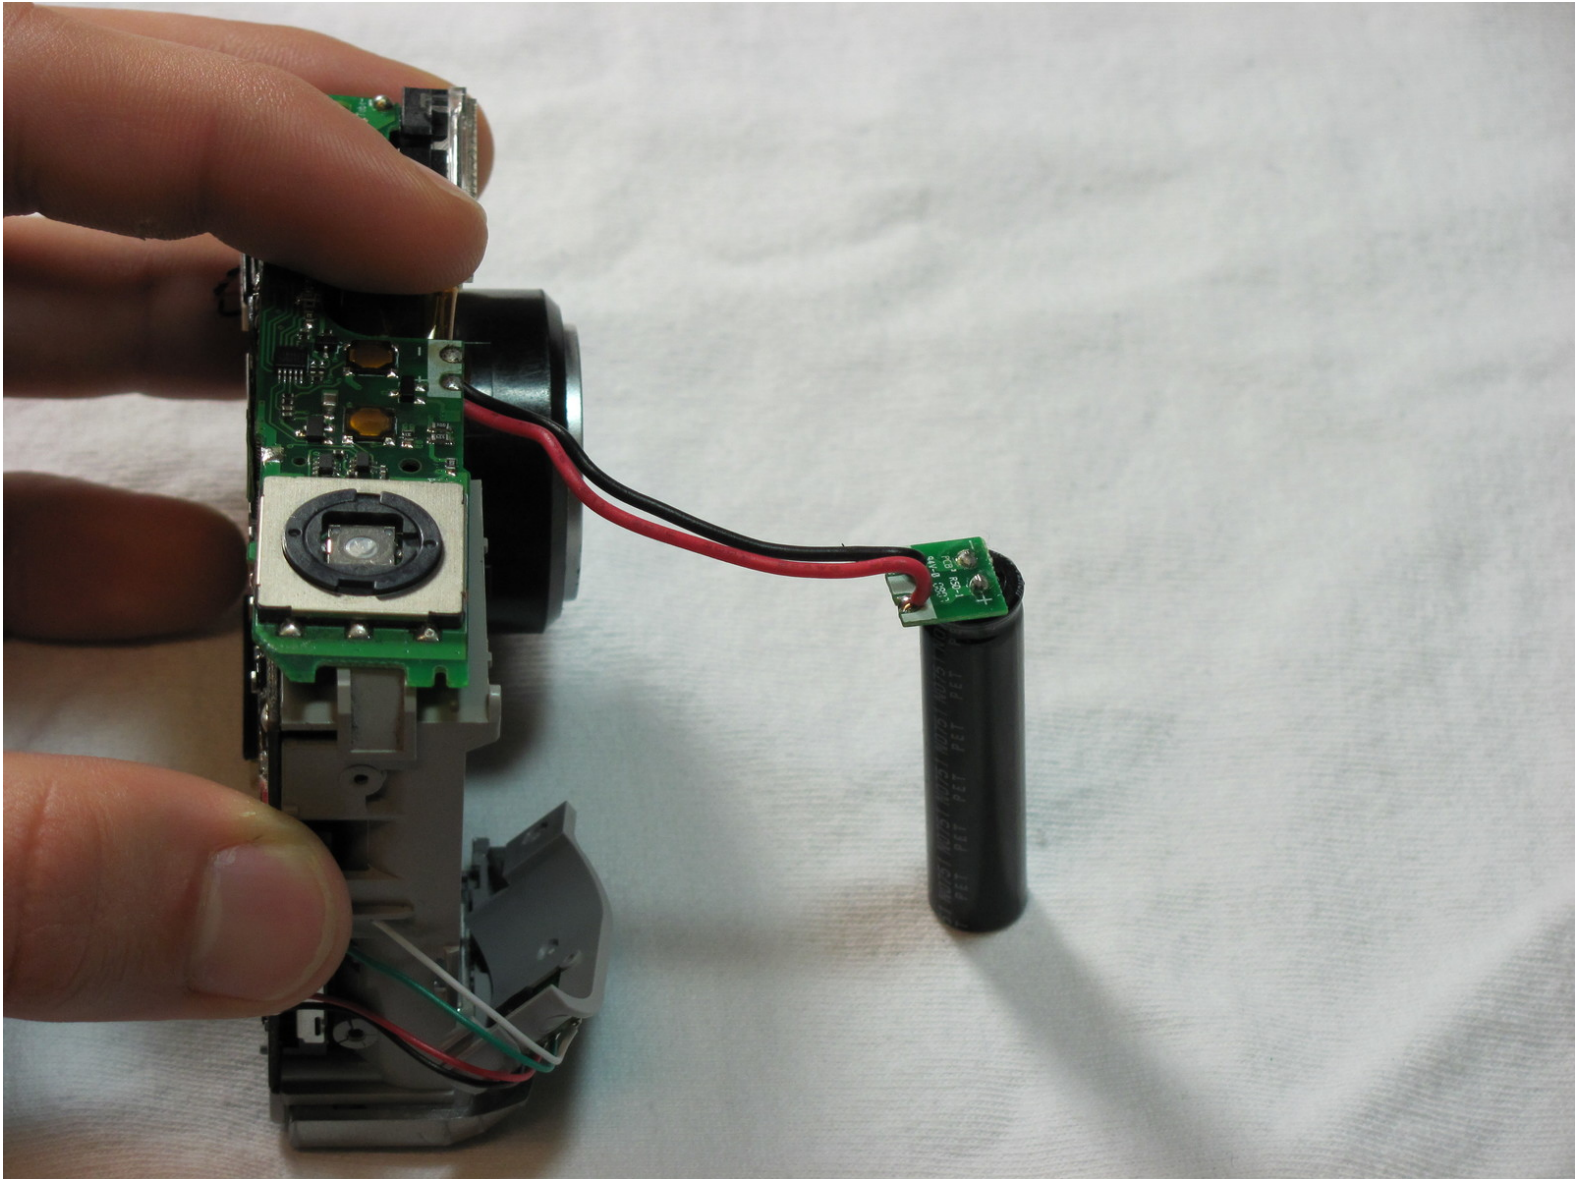

INTRODUCTION

Replacing the capacitor.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Station](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
 - If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2






- Remove the old batteries.

Step 3 — Outer Case



- Remove 7 screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.



Step 4

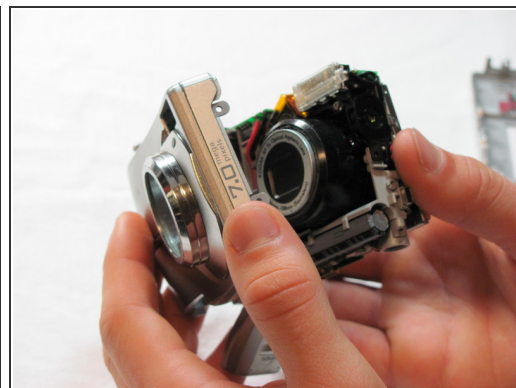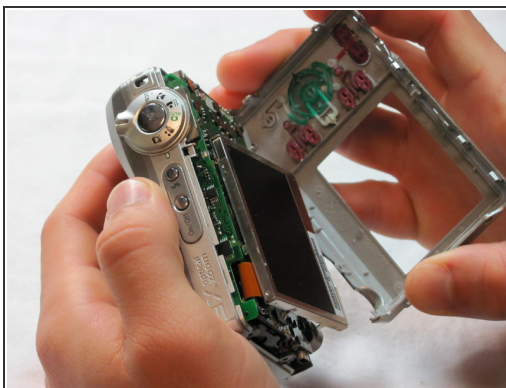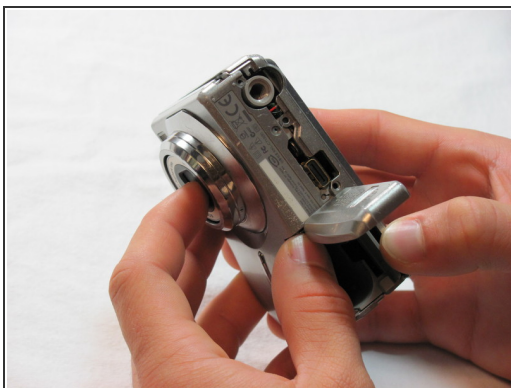

⚠ Make sure the battery cap is "up".

- Pull the outer case off with your hands.


Step 5 — Capacitor

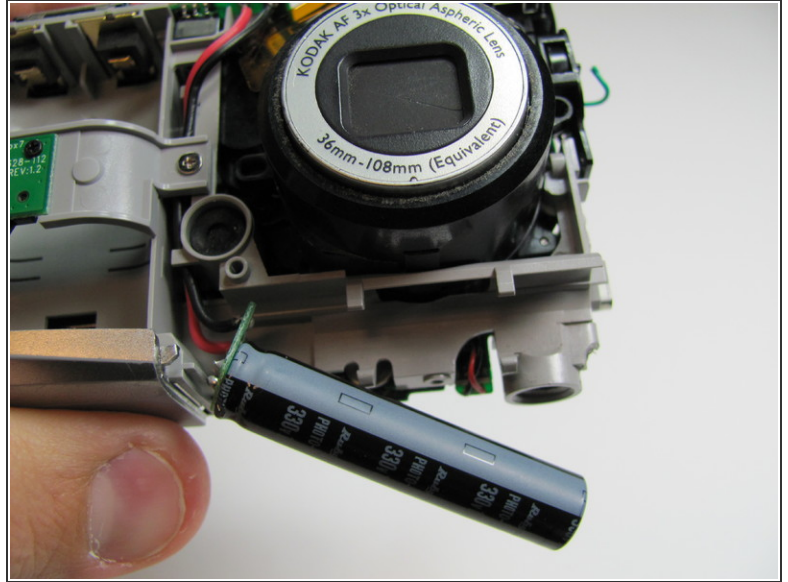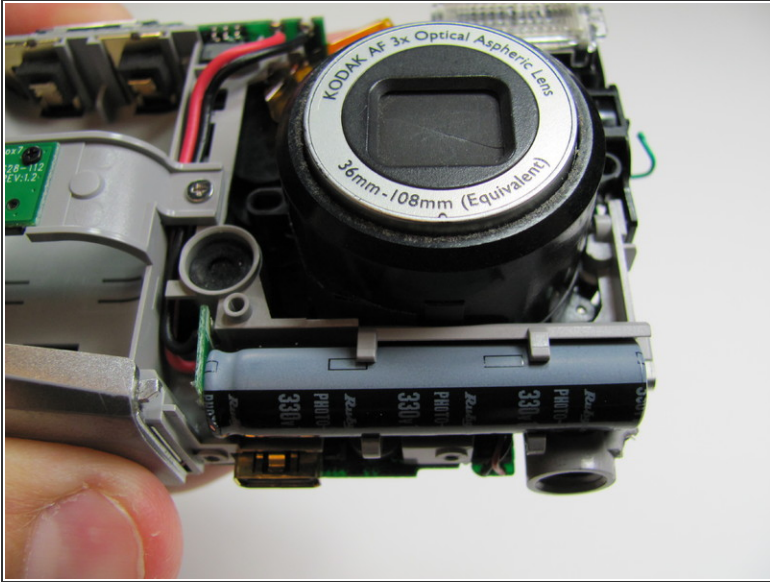

⚠ To avoid an electric shock, do not touch capacitor.

- The capacitor is located underneath the lens.
- It is held in place by 4 plastic snaps; it can be easily removed by pulling outward with your fingers.

Step 6

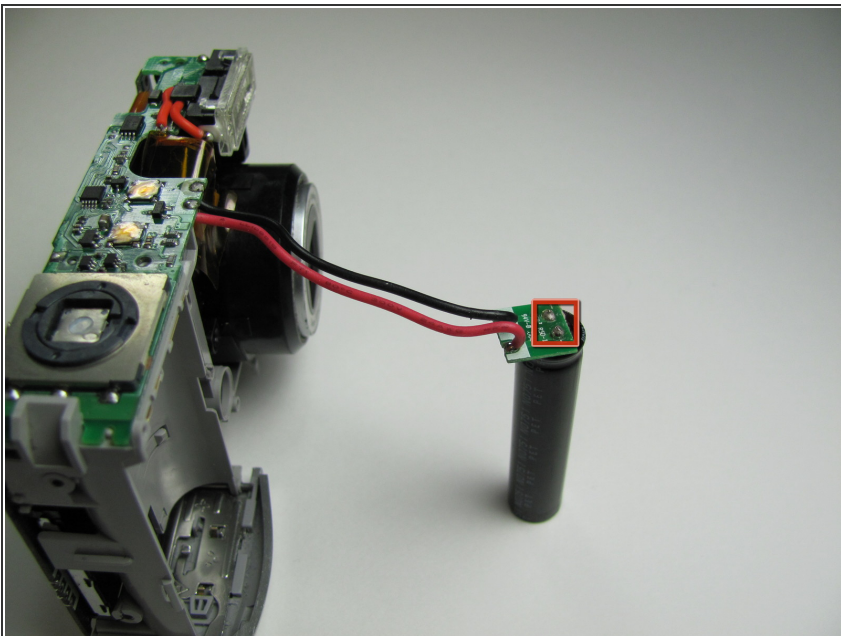

- Desolder points connecting capacitor to circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:53:19 AM.